
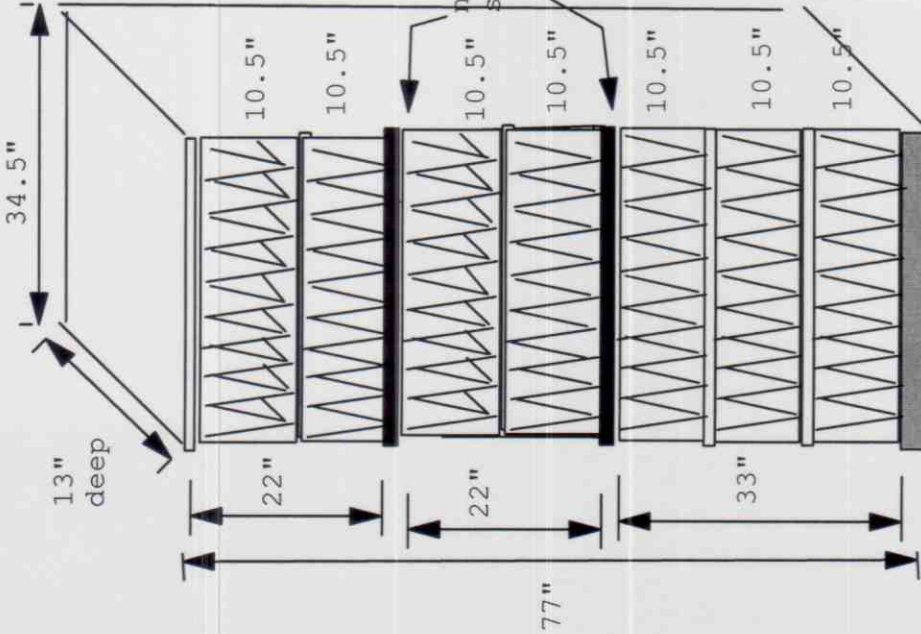



Wenger System overhead view

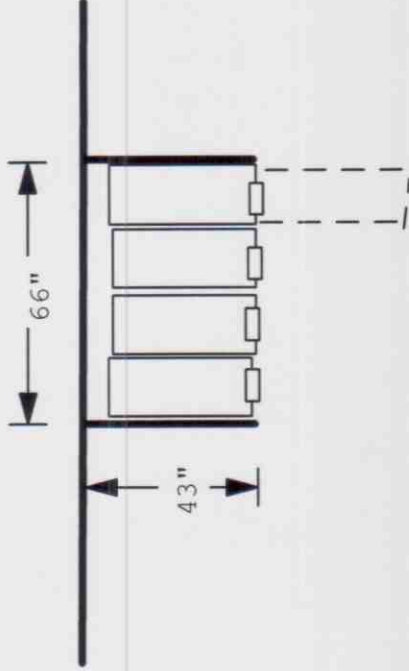



non-moveable shelves

Drill tap holes into Wenger side walls according to template on separate page.
 Screw in brackets as shown below, then insert rails.
 Hang sample compartments as you go to verify proper spacing.
 Be careful not to drill through front wall

Music Filing System in Wenger

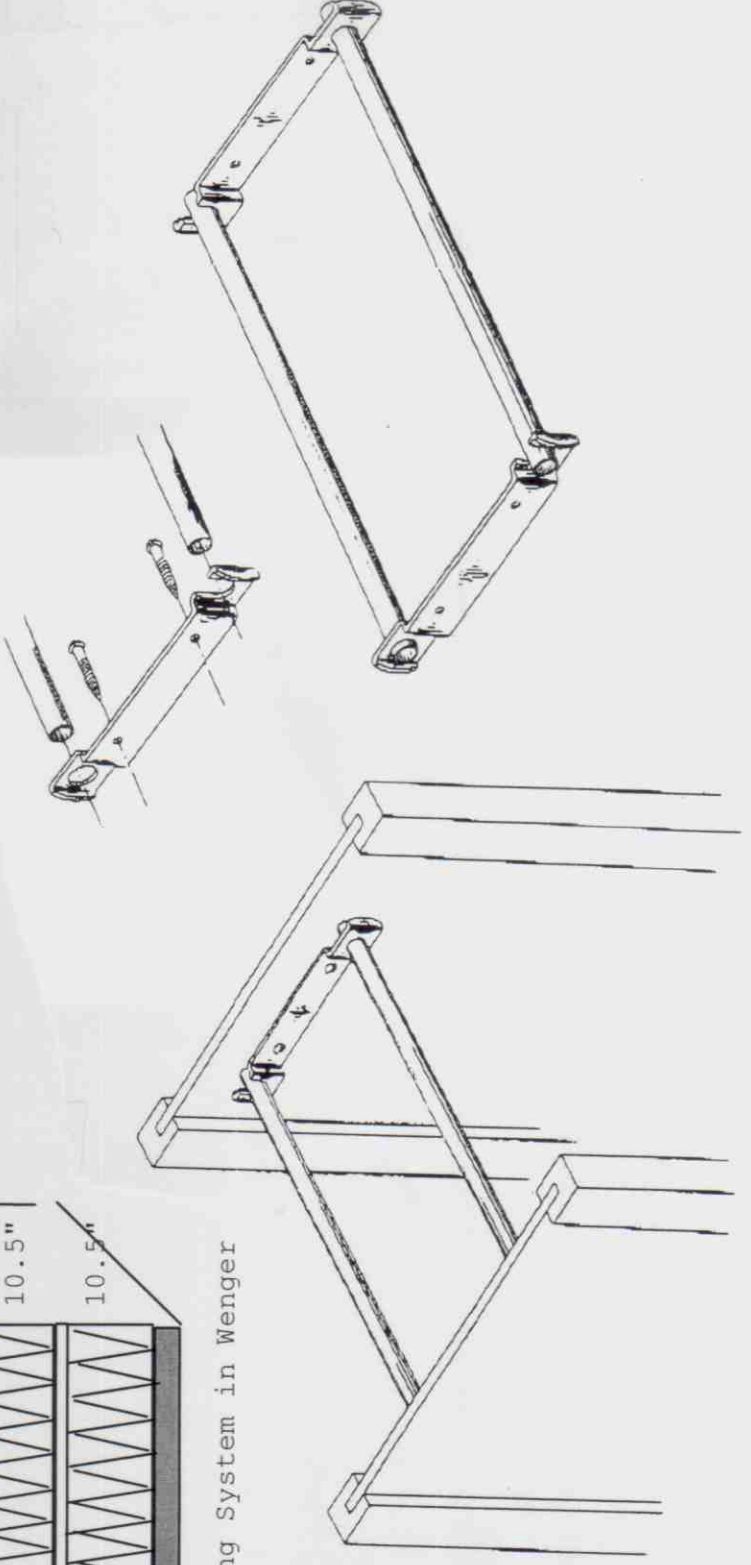

Wenger cabinets have 22" high openings and 33" high openings between fixed shelves. Approximate hole drilling locations for HD sidewall rail assemblies in Wenger cabinets are shown here. Opposite side should be called "Left Side Back" and is a mirror image of this. When drilling holes for rail brackets, placing a sample compartment on installed rails is recommended to verify proper spacing. Be careful not to drill all the way through the wood side, especially in the front.

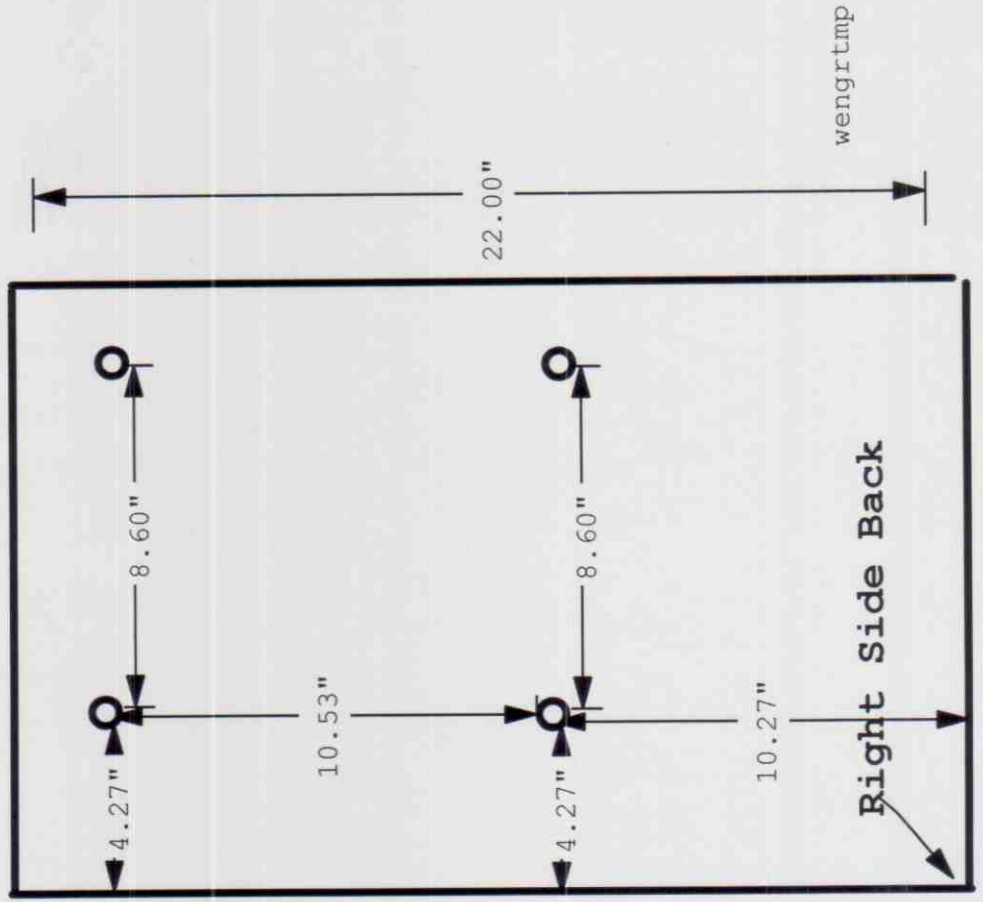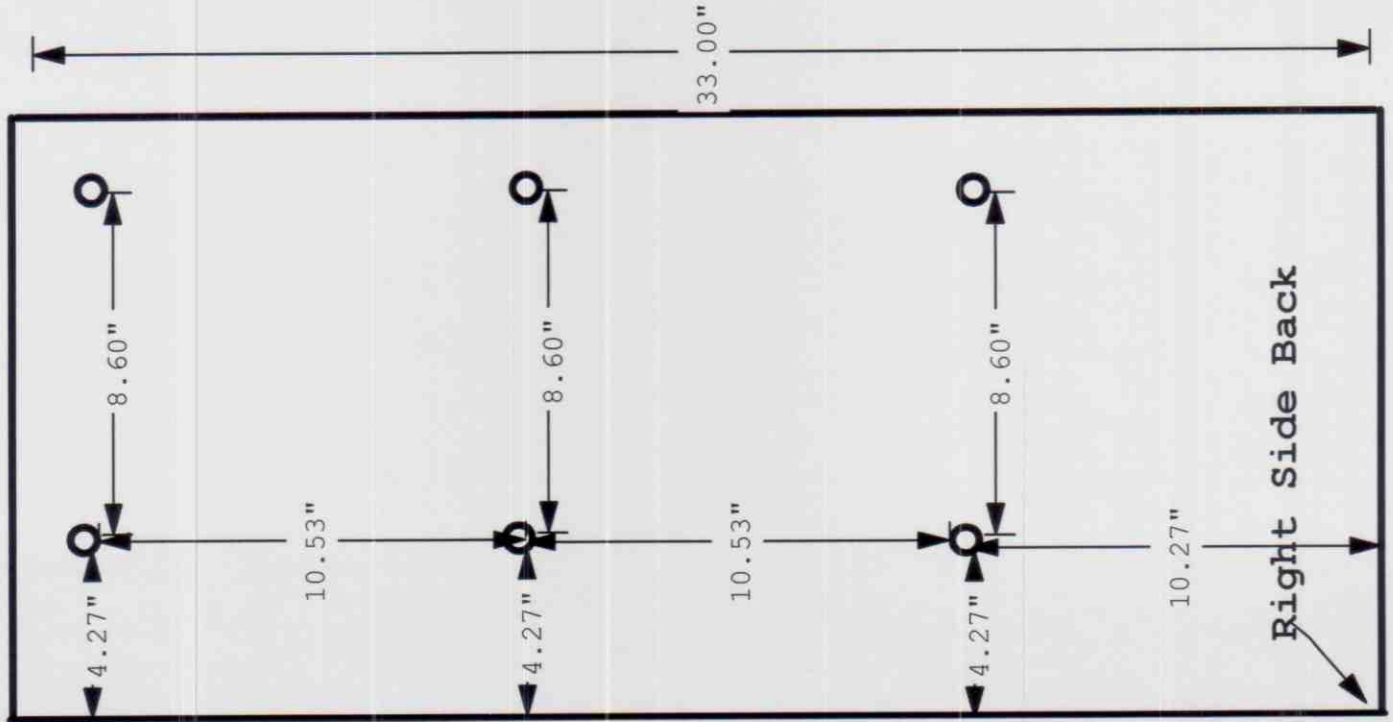

wengrtmp